

ENGINE SECTION 1

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUEL INJECTION (FUEL SYSTEMS) FU(H4SO)

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES) EC(H4SO)

INTAKE (INDUCTION) IN(H4SO)

MECHANICAL ME(H4SO)

EXHAUST EX(H4SO)

COOLING CO(H4SO)

LUBRICATION LU(H4SO)

SPEED CONTROL SYSTEMS SP(H4SO)

IGNITION IG(H4SO)

STARTING/CHARGING SYSTEMS SC(H4SO)

ENGINE (DIAGNOSTICS) EN(H4SO)

FUEL INJECTION (FUEL SYSTEMS) FU(H4SOw/oOBD)

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES) EC(H4SOw/oOBD)

INTAKE (INDUCTION) IN(H4SOw/oOBD)

MECHANICAL ME(H4SOw/oOBD)

EXHAUST EX(H4SOw/oOBD)

COOLING CO(H4SOw/oOBD)

ENGINE SECTION 1

LUBRICATION	LU(H4SOw/oOBD)
SPEED CONTROL SYSTEMS	SP(H4SOw/oOBD)
IGNITION	IG(H4SOw/oOBD)
STARTING/CHARGING SYSTEMS	SC(H4SOw/oOBD)
ENGINE (DIAGNOSTICS)	EN(H4SOw/oOBD)

MECHANICAL

ME(H4SO)

	Page
1. General Description	2
2. Compression	23
3. Idle Speed	24
4. Ignition Timing	25
5. Intake Manifold Vacuum.....	26
6. Engine Oil Pressure	27
7. Fuel Pressure	28
8. Valve Clearance	29
9. Engine Assembly	32
10. Engine Mounting	39
11. Preparation for Overhaul.....	40
12. V-belt.....	41
13. Crankshaft Pulley	43
14. Belt Cover	45
15. Timing Belt Assembly.....	46
16. Camshaft Sprocket.....	51
17. Crankshaft Sprocket.....	53
18. Valve Rocker Assembly	54
19. Camshaft.....	56
20. Cylinder Head Assembly.....	60
21. Cylinder Block	67
22. Engine Trouble in General	89
23. Engine Noise.....	94

GENERAL DESCRIPTION

MECHANICAL

1. General Description

A: SPECIFICATIONS

Engine	Model		2000 cc	2500 cc	
	Type		Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine		
	Valve arrangement		Belt driven, single over-head camshaft, 4-valve/cylinder		
	Bore x Stroke		mm (in) 92 x 75 (3.62 x 2.95)	99.5 x 79.0 (3.917 x 3.110)	
	Displacement		cm ³ (cu in) 1,994 (121.67)	2,457 (150)	
	Compression ratio		10.0		
	Compression pressure (at 200 — 300 rpm)		kPa (kg/cm ² , psi) 1,079 — 1,275 (11.0 — 13.0, 156 — 185)		
	Number of piston rings		Pressure ring: 2, Oil ring: 1		
	Intake valve timing		Opening	4° BTDC	1° BTDC
			Closing	48° ABDC	51° ABDC
	Exhaust valve timing		Opening	48° BBDC	50° BBDC
			Closing	4° ATDC	6° ATDC
	Valve clearance		Intake	mm (in) 0.20±0.02 (0.0079±0.0008)	
			Exhaust	mm (in) 0.25±0.02 (0.0098±0.0008)	
	Idling speed [At neutral position on MT, or "P" or "N" position on AT]		rpm	650±100 (No load) 850±100 (A/C switch ON)	
	Firing order		1 → 3 → 2 → 4		
Ignition timing		BTDC/rpm	10°±10°/700	10°±10°/700 (MT) 15°±10°/700 (AT)	

NOTE:

STD: Standard I.D.: Inner Diameter O.D.: Outer Diameter US: Undersize OS: Oversize

GENERAL DESCRIPTION

MECHANICAL

Belt tensioner adjuster	Protrusion of adjuster rod			5.2 — 6.2 mm (0.205 — 0.244 in)	
Belt tensioner	Spacer O.D.			17.955 — 17.975 mm (0.7069 — 0.7077 in)	
	Tensioner bushing I.D.			18.00 — 18.08 mm (0.7087 — 0.7118 in)	
	Clearance between spacer and bushing		STD	0.025 — 0.125 mm (0.0010 — 0.0049 in)	
			Limit	0.175 mm (0.0069 in)	
	Side clearance of spacer		STD	0.20 — 0.55 mm (0.0079 — 0.0217 in)	
Limit			0.81 mm (0.0319 in)		
Valve rocker arm	Clearance between shaft and arm			STD	0.020 — 0.054 mm (0.0008 — 0.0021 in)
				Limit	0.10 mm (0.0039 in)
Camshaft	Bend limit			0.025 mm (0.0010 in)	
	Thrust clearance		STD	0.030 — 0.090 mm (0.0012 — 0.0035 in)	
			Limit	0.10 mm (0.0039 in)	
	Cam lobe height	2000 cc	Intake	STD	38.732 — 38.832 mm (1.5249 — 1.5288 in)
				Limit	38.632 mm (1.5209 in)
		2500 cc	Exhaust	STD	39.257 — 39.357 mm (1.5455 — 1.5495 in)
				Limit	39.157 mm (1.5416 in)
	2500 cc	Intake	STD	39.485 — 39.585 mm (1.5545 — 1.5585 in)	
			Limit	39.385 mm (1.5506 in)	
	2500 cc	Exhaust	STD	39.257 — 39.357 mm (1.5455 — 1.5495 in)	
			Limit	39.157 mm (1.5416 in)	
	Camshaft journal O.D.			31.928 — 31.945 mm (1.2570 — 1.2577 in)	
Camshaft journal hole I.D. (Cylinder head)			32.000 — 32.018 mm (1.2598 — 1.2605 in)		
Journal clearance		STD	0.055 — 0.090 mm (0.0022 — 0.0035 in)		
		Limit	0.10 mm (0.0039 in)		
Cylinder head	Surface warpage limit (mating with cylinder block)			0.05 mm (0.0020 in)	
	Surface grinding limit			0.1 mm (0.004 in)	
	Standard height			97.5 mm (3.84 in)	
Valve set	Refacing angle			90°	
	Contacting width	Intake	STD	1.1 mm (0.043 in)	
			Limit	1.8 mm (0.070 in)	
		Exhaust	STD	1.5 mm (0.059 in)	
			Limit	2.2 mm (0.087 in)	
Valve guide	Inner diameter			6.000 — 6.012 mm (0.2362 — 0.2367 in)	
	Protrusion above head		Intake	20.0 — 20.5 mm (0.787 — 0.807 in)	
			Exhaust	16.5 — 17.0 mm (0.650 — 0.669 in)	
Valve	Head edge thickness	Intake	STD	1.0 mm (0.039 in)	
			Limit	0.6 mm (0.024 in)	
		Exhaust	STD	1.2 mm (0.047 in)	
			Limit	0.6 mm (0.024 in)	
	Stem diameter		Intake	5.950 — 5.965 mm (0.2343 — 0.2348 in)	
			Exhaust	5.945 — 5.960 mm (0.2341 — 0.2346 in)	
	Stem oil clearance	STD	Intake	0.035 — 0.062 mm (0.0014 — 0.0024 in)	
			Exhaust	0.040 — 0.067 mm (0.0016 — 0.0026 in)	
			Limit	— 0.15 mm (0.0059 in)	
Overall length		Intake	120.6 mm (4.75 in)		
		Exhaust	121.7 mm (4.79 in)		

GENERAL DESCRIPTION

MECHANICAL

Valve spring	Free length			54.30 mm (2.1378 in)			
	Squareness			2.5°, 2.4 mm (0.094 in)			
	Tension/spring height			Set	214 — 246 N (22 — 25 kgf, 48 — 55 lb)/ 45.0 mm (1.772 in)		
				Lift	526 — 582 N (54 — 59 kgf, 119 — 130 lb)/ 34.7 mm (1.366 in)		
Cylinder block	Surface warpage limit (mating with cylinder head)			0.05 mm (0.0020 in)			
	Surface grinding limit			0.1 mm (0.004 in)			
	Cylinder bore	2000 cc	STD	A	92.005 — 92.015 mm (3.6222 — 3.6226 in)		
				B	91.995 — 92.005 mm (3.6218 — 3.6222 in)		
		2500 cc	STD	A	99.505 — 99.515 mm (3.9175 — 3.9179 in)		
				B	99.495 — 99.505 mm (3.9171 — 3.9175 in)		
	Taper			STD	0.015 mm (0.0006 in)		
				Limit	0.050 mm (0.0020 in)		
	Out-of-roundness			STD	0.010 mm (0.0004 in)		
				Limit	0.050 mm (0.0020 in)		
Piston clearance			STD	0.010 — 0.030 mm (0.0004 — 0.0012 in)			
			Limit	0.050 mm (0.0020 in)			
Enlarging (boring) limit			0.5 mm (0.020 in)				
Piston	Outer diameter	2000 cc	STD	A	91.985 — 91.995 mm (3.6214 — 3.6218 in)		
				B	91.975 — 91.985 mm (3.6211 — 3.6214 in)		
					0.25 mm (0.0098 in) OS	92.225 — 92.235 mm (3.6309 — 3.6313 in)	
					0.50 mm (0.0197 in) OS	92.475 — 92.485 mm (3.6407 — 3.6411 in)	
	2500 cc	STD	A	99.485 — 99.495 mm (3.9167 — 3.9171 in)			
			B	99.475 — 99.485 mm (3.9163 — 3.9167 in)			
				0.25 mm (0.0098 in) OS	99.725 — 99.735 mm (3.9262 — 3.9266 in)		
				0.50 mm (0.0197 in) OS	99.975 — 99.985 mm (3.9360 — 3.9364 in)		
Standard inner diameter of piston pin hole			23.000 — 23.006 mm (0.9055 — 0.9057 in)				
Piston pin	Outer diameter			22.994 — 23.000 mm (0.9053 — 0.9055 in)			
	Standard clearance between piston pin and piston			0.004 — 0.008 mm (0.0002 — 0.0003 in)			
	Degree of fit			Piston pin must be fitted into position with thumb at 20°C (68°F).			
Piston ring	Piston ring gap	Top ring	STD		0.20 — 0.35 mm (0.0079 — 0.0138 in)		
			Limit		1.0 mm (0.039 in)		
		Second ring	2000 cc	STD	0.35 — 0.50 mm (0.0138 — 0.0197 in)		
				Limit	1.0 mm (0.039 in)		
			2500 cc	STD	0.37 — 0.52 mm (0.0146 — 0.0204 in)		
				Limit	1.0 mm (0.039 in)		
	Oil ring	STD		0.20 — 0.50 mm (0.0079 — 0.0197 in)			
		Limit		1.5 mm (0.059 in)			
	Clearance between piston ring and piston ring groove	Top ring	STD		0.040 — 0.080 mm (0.0016 — 0.0031 in)		
			Limit		0.15 mm (0.0059 in)		
Second ring		STD		0.030 — 0.070 mm (0.0012 — 0.0028 in)			
		Limit		0.15 mm (0.0059 in)			
Connecting rod	Bend twist per 100 mm (3.94 in) in length		Limit	0.10 mm (0.0039 in)			
	Side clearance		STD	0.070 — 0.330 mm (0.0028 — 0.0130 in)			
			Limit	0.4 mm (0.016 in)			

GENERAL DESCRIPTION

MECHANICAL

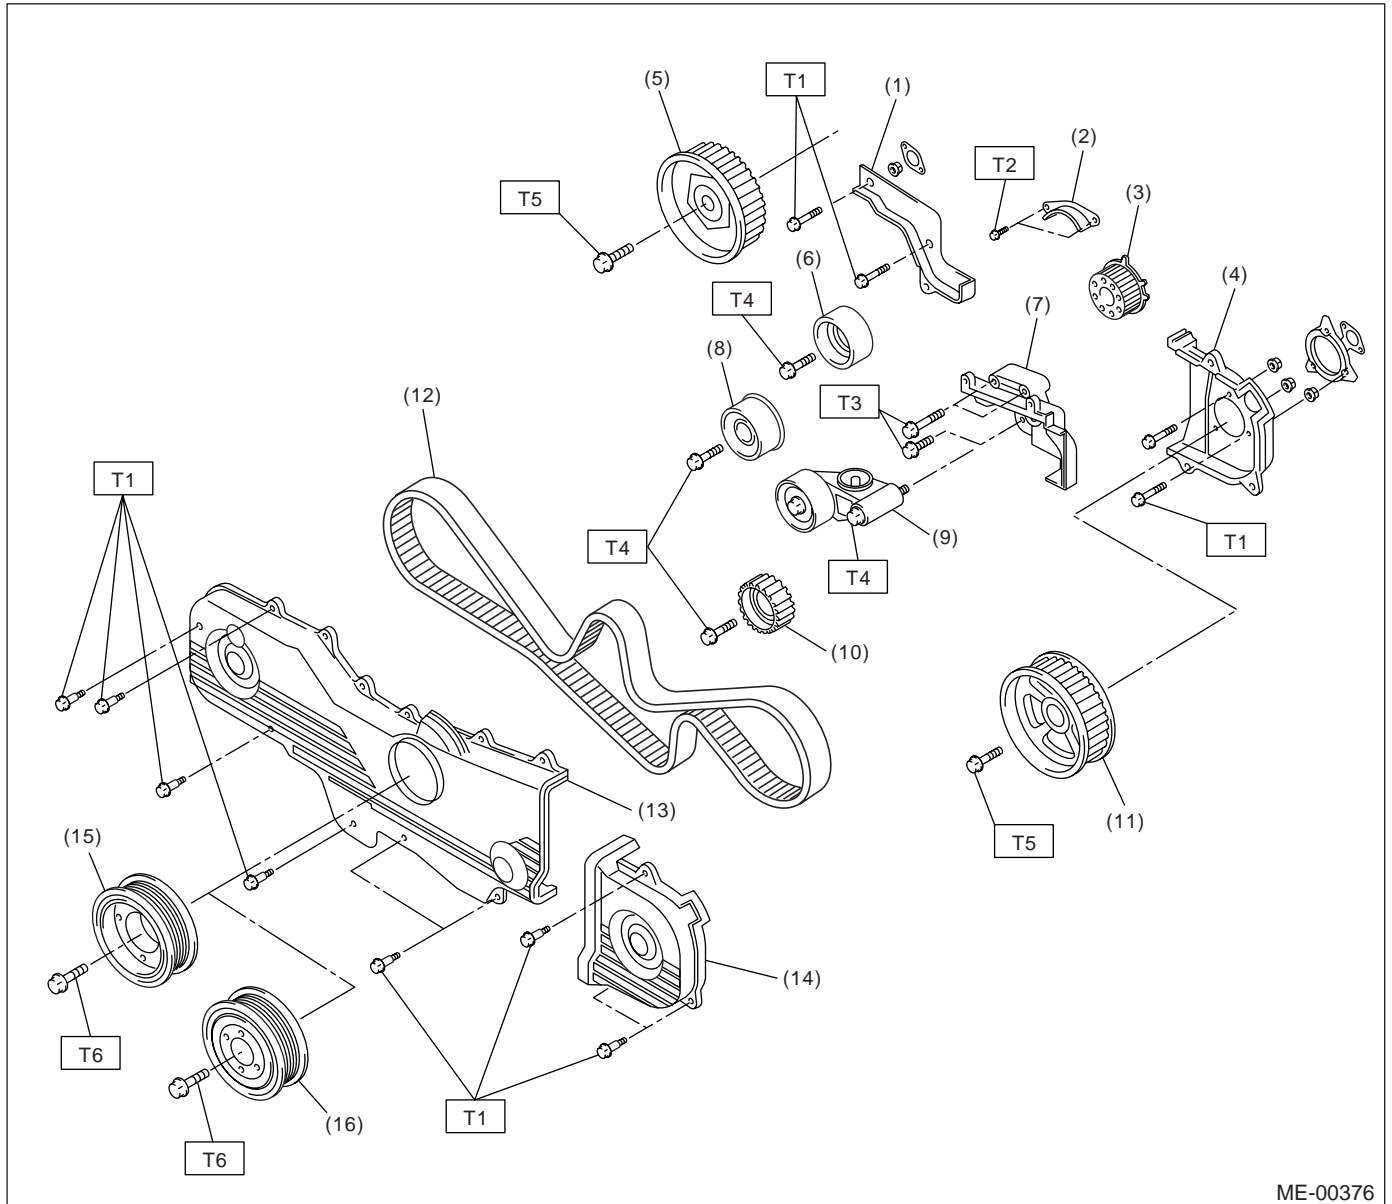
Connecting rod bearing	Oil clearance	2000 cc	STD	0.010 — 0.038 mm (0.0004 — 0.0015 in)
			Limit	0.05 mm (0.0020 in)
		2500 cc	STD	0.012 — 0.038 mm (0.0005 — 0.0015 in)
			Limit	0.05 mm (0.0020 in)
	Thickness at center portion	2000 cc	STD	1.492 — 1.501 mm (0.0587 — 0.0591 in)
			0.03 mm (0.0012 in) US	1.510 — 1.513 mm (0.0594 — 0.0596 in)
			0.05 mm (0.0020 in) US	1.520 — 1.523 mm (0.0598 — 0.0600 in)
			0.25 mm (0.0098 in) US	1.620 — 1.623 mm (0.0638 — 0.0639 in)
2500 cc		STD	1.490 — 1.502 mm (0.0587 — 0.0591 in)	
		0.03 mm (0.0012 in) US	1.504 — 1.512 mm (0.0592 — 0.0595 in)	
		0.05 mm (0.0020 in) US	1.514 — 1.522 mm (0.0596 — 0.0599 in)	
		0.25 mm (0.0098 in) US	1.614 — 1.622 mm (0.0635 — 0.0639 in)	
Connecting rod bushing	Clearance between piston pin and bushing		STD	0 — 0.022 mm (0 — 0.0009 in)
			Limit	0.030 mm (0.0012 in)
Crankshaft	Bend limit			0.035 mm (0.0014 in)
	Crank pin and crank journal	Out-of-roundness		0.020 mm (0.0008 in) or less
		Grinding limit		0.250 mm (0.0098 in)
	Crank pin outer diameter		STD	51.984 — 52.000 mm (2.0466 — 2.0472 in)
			0.03 mm (0.0012 in) US	51.954 — 51.970 mm (2.0454 — 2.0461 in)
			0.05 mm (0.0020 in) US	51.934 — 51.950 mm (2.0446 — 2.0453 in)
			0.25 mm (0.0098 in) US	51.734 — 51.750 mm (2.0368 — 2.0374 in)
	Crank journal outer diameter	#1, #3	STD	59.992 — 60.008 mm (2.3619 — 2.3625 in)
			0.03 mm (0.0012 in) US	59.962 — 59.978 mm (2.3607 — 2.3613 in)
			0.05 mm (0.0020 in) US	59.942 — 59.958 mm (2.3599 — 2.3605 in)
			0.25 mm (0.0098 in) US	59.742 — 59.758 mm (2.3520 — 2.3527 in)
		#2, #4, #5	STD	59.992 — 60.008 mm (2.3619 — 2.3625 in)
			0.03 mm (0.0012 in) US	59.962 — 59.978 mm (2.3607 — 2.3613 in)
			0.05 mm (0.0020 in) US	59.942 — 59.958 mm (2.3599 — 2.3605 in)
			0.25 mm (0.0098 in) US	59.742 — 59.758 mm (2.3520 — 2.3527 in)
	Thrust clearance		STD	0.030 — 0.115 mm (0.0012 — 0.0045 in)
			Limit	0.25 mm (0.0098 in)
	Oil clearance	#1	STD	0.003 — 0.030 mm (0.0001 — 0.0012 in)
			Limit	0.040 mm (0.0016 in)
		#2	STD	0.012 — 0.033 mm (0.0005 — 0.0013 in)
			Limit	0.045 mm (0.0018 in)
		#3	STD	0.003 — 0.030 mm (0.0001 — 0.0012 in)
			Limit	0.040 mm (0.0016 in)
#4		STD	0.012 — 0.033 mm (0.0005 — 0.0013 in)	
		Limit	0.045 mm (0.0018 in)	
#5		STD	0.010 — 0.031 mm (0.0004 — 0.0012 in)	
		Limit	0.040 mm (0.0016 in)	
Crankshaft bearing	Crankshaft bearing thickness	#1, #3	STD	1.998 — 2.011 mm (0.0787 — 0.0792 in)
			0.03 mm (0.0012 in) US	2.017 — 2.020 mm (0.0794 — 0.0795 in)
			0.05 mm (0.0020 in) US	2.027 — 2.030 mm (0.0798 — 0.0799 in)
			0.25 mm (0.0098 in) US	2.127 — 2.130 mm (0.0837 — 0.0839 in)
		#2, #4, #5	STD	2.000 — 2.013 mm (0.0787 — 0.0793 in)
			0.03 mm (0.0012 in) US	2.019 — 2.022 mm (0.0795 — 0.0796 in)
			0.05 mm (0.0020 in) US	2.029 — 2.032 mm (0.0799 — 0.0800 in)
			0.25 mm (0.0098 in) US	2.129 — 2.132 mm (0.0838 — 0.0839 in)

GENERAL DESCRIPTION

MECHANICAL

B: COMPONENT

1. TIMING BELT



ME-00376

- | | |
|--|--|
| (1) Belt cover No. 2 (RH) | (9) Automatic belt tension adjuster ASSY |
| (2) Timing belt guide (MT vehicles only) | (10) Belt idler No. 2 |
| (3) Crankshaft sprocket | (11) Camshaft sprocket No. 2 |
| (4) Belt cover No. 2 (LH) | (12) Timing belt |
| (5) Camshaft sprocket No. 1 | (13) Front belt cover |
| (6) Belt idler (No. 1) | (14) Belt cover (LH) |
| (7) Tensioner bracket | (15) Crankshaft pulley (2000 cc model) |
| (8) Belt idler (No. 2) | (16) Crankshaft pulley (2500 cc model) |

Tightening torque: N·m (kgf·m, ft·lb)

T1: 5 (0.5, 3.6)

T2: 10 (1.0, 7.2)

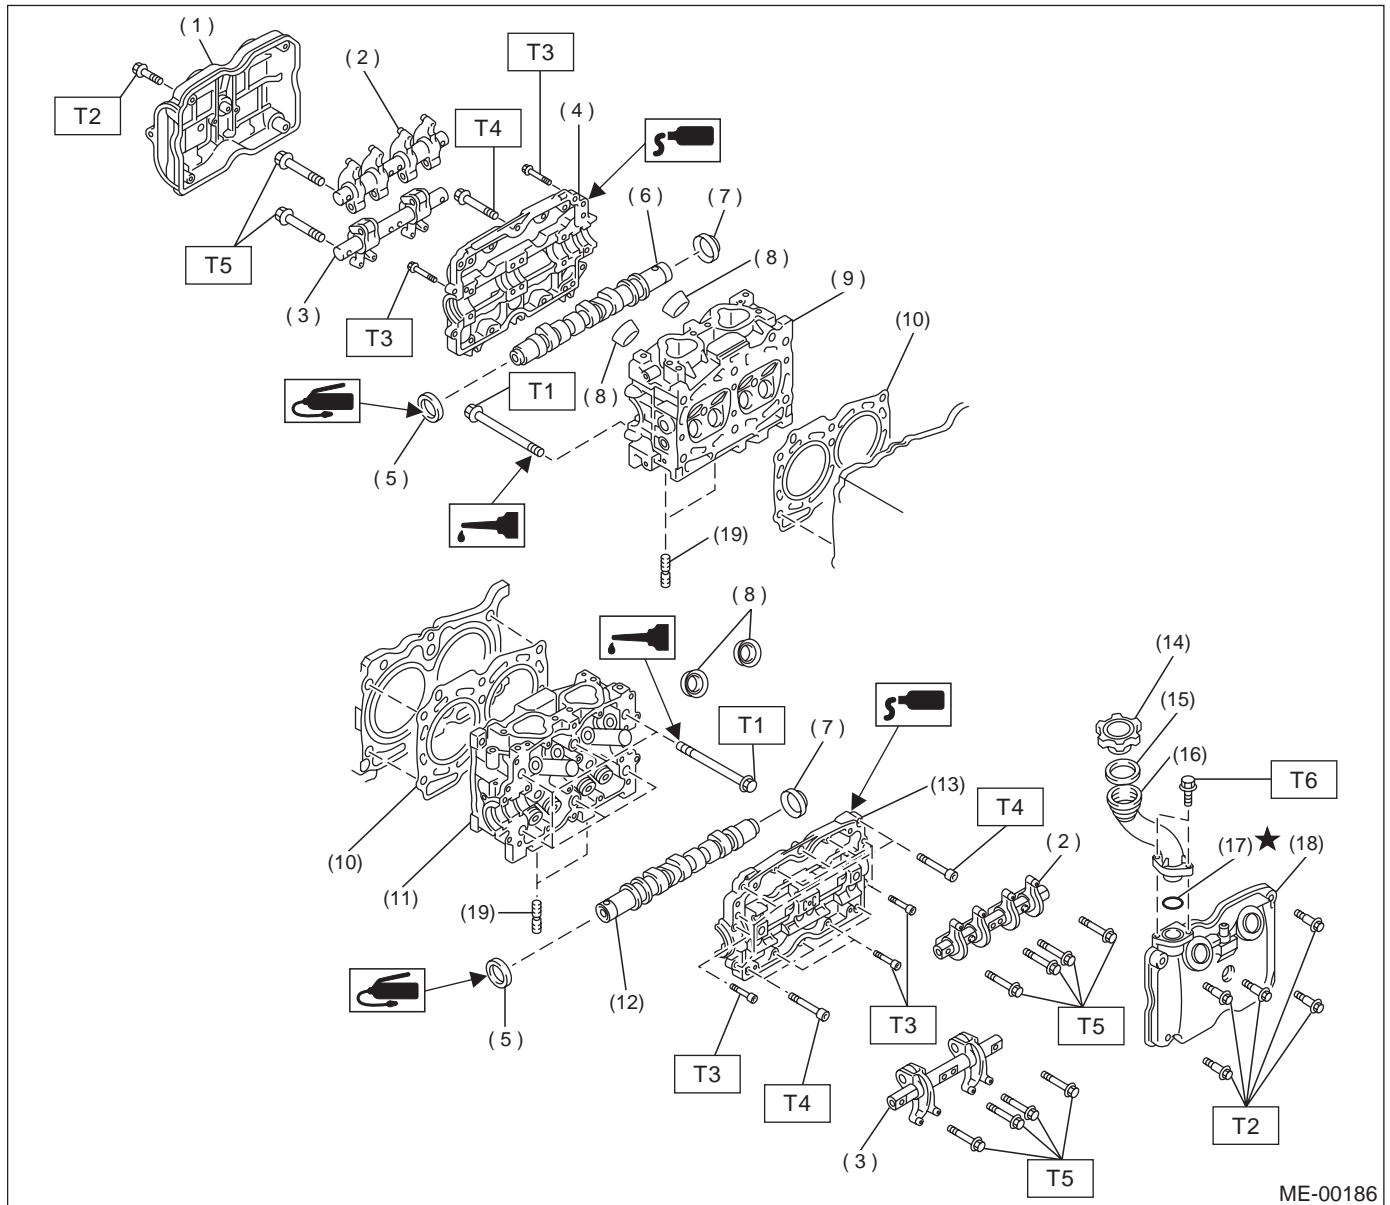
T3: 25 (2.5, 18.1)

T4: 39 (4.0, 28.9)

T5: 78 (8.0, 57.9)

T6: <Ref. to ME(H4SO)-43, INSTALLATION, CRANKSHAFT PULLEY.>

2. CYLINDER HEAD AND CAMSHAFT



ME-00186

- | | |
|-------------------------------|-------------------------|
| (1) Rocker cover (RH) | (11) Cylinder head (LH) |
| (2) Intake valve rocker ASSY | (12) Camshaft (LH) |
| (3) Exhaust valve rocker ASSY | (13) Camshaft cap (LH) |
| (4) Camshaft cap (RH) | (14) Oil filler cap |
| (5) Oil seal | (15) Gasket |
| (6) Camshaft (RH) | (16) Oil filler duct |
| (7) Plug | (17) O-ring |
| (8) Spark plug pipe gasket | (18) Rocker cover (LH) |
| (9) Cylinder head (RH) | (19) Stud bolt |
| (10) Cylinder head gasket | |

Tightening torque: N·m (kgf·m, ft·lb)

T1: <Ref. to ME(H4SO)-60, CYLINDER HEAD, INSTALLATION, CYLINDER HEAD ASSEMBLY.>

T2: 5 (0.5, 3.6)

T3: 10 (1.0, 7.2)

T4: 18 (1.8, 13.0)

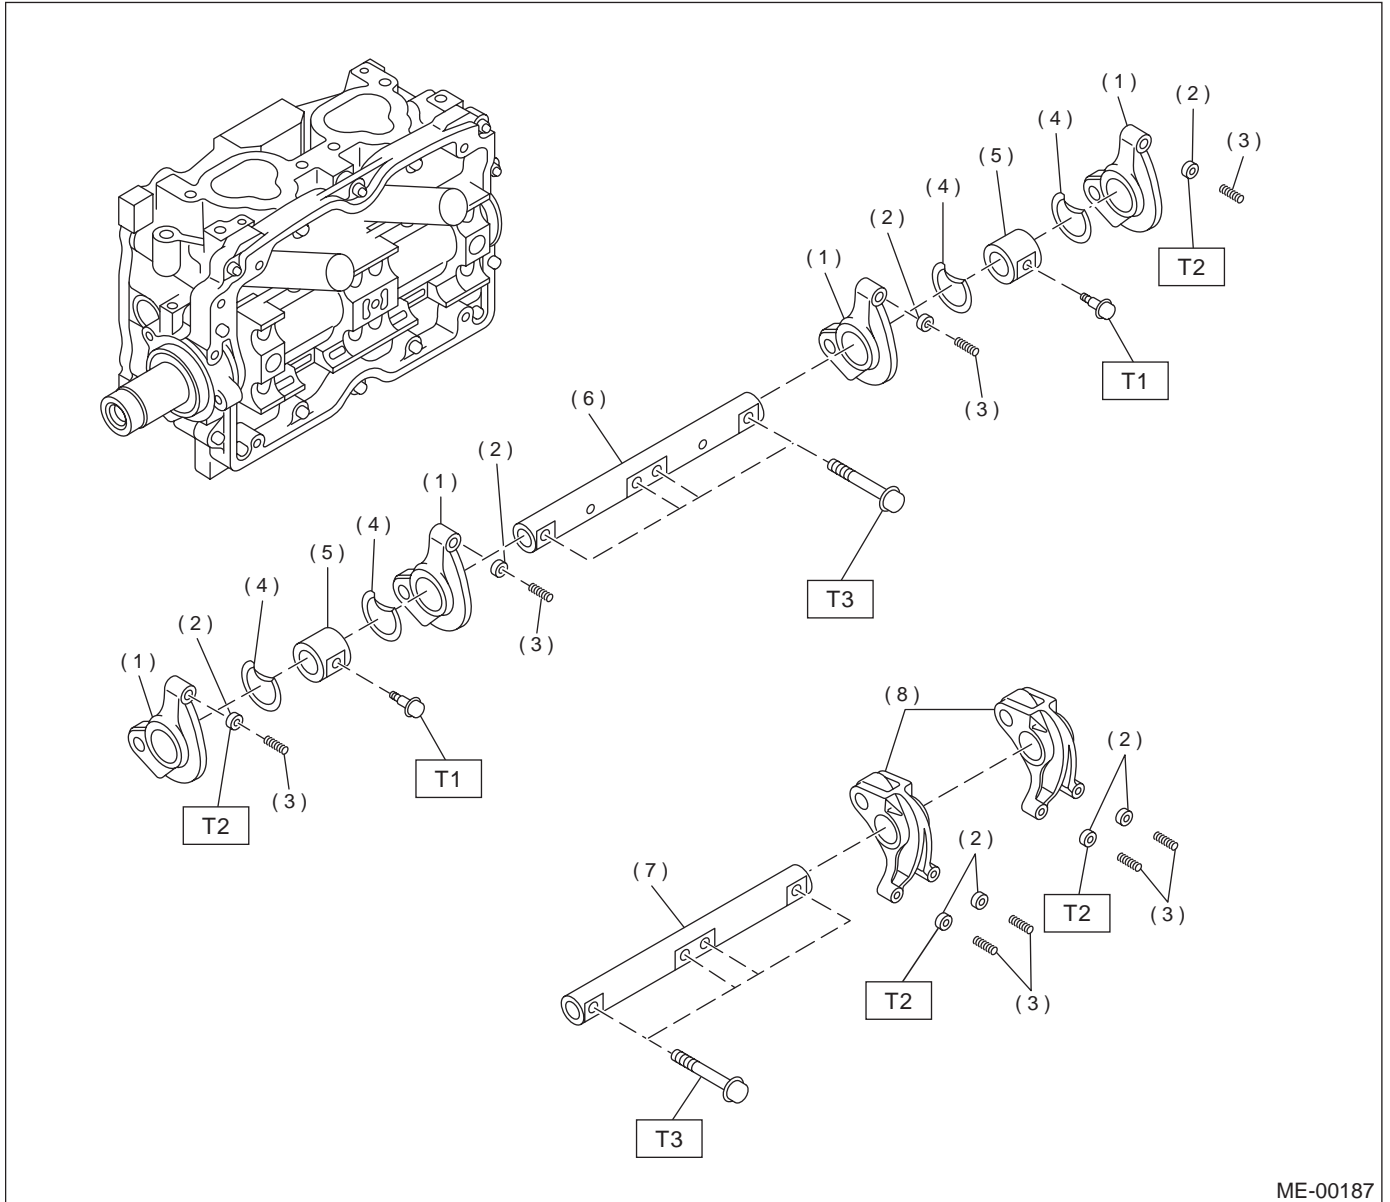
T5: 25 (2.5, 18.1)

T6: 6.4 (0.65, 4.7)

GENERAL DESCRIPTION

MECHANICAL

3. VALVE ROCKER ASSEMBLY



- | | |
|---------------------------------|------------------------------|
| (1) Intake valve rocker arm | (5) Rocker shaft support |
| (2) Valve rocker nut | (6) Intake rocker shaft |
| (3) Valve rocker adjuster screw | (7) Exhaust rocker shaft |
| (4) Spring | (8) Exhaust valve rocker arm |

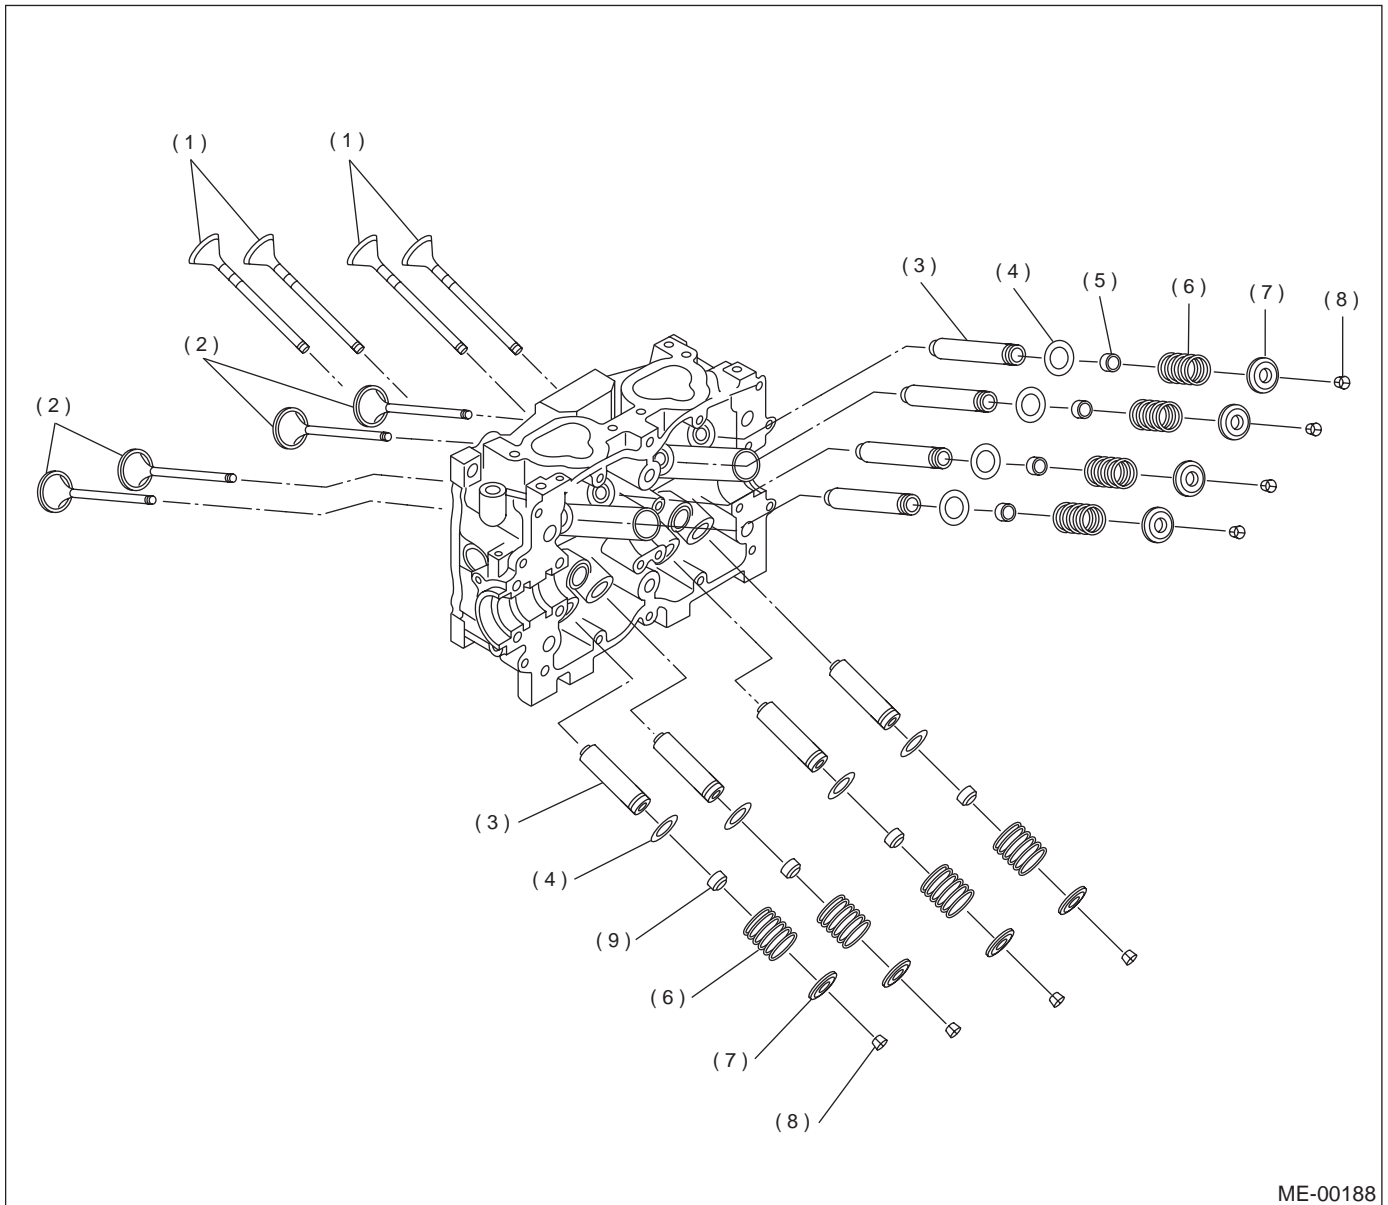
Tightening torque: N·m (kgf·m, ft·lb)

T1: 5 (0.5, 3.6)

T2: 10 (1.0, 7.2)

T3: 25 (2.5, 18.1)

4. CYLINDER HEAD AND VALVE ASSEMBLY



ME-00188

- (1) Exhaust valve
- (2) Intake valve
- (3) Valve guide

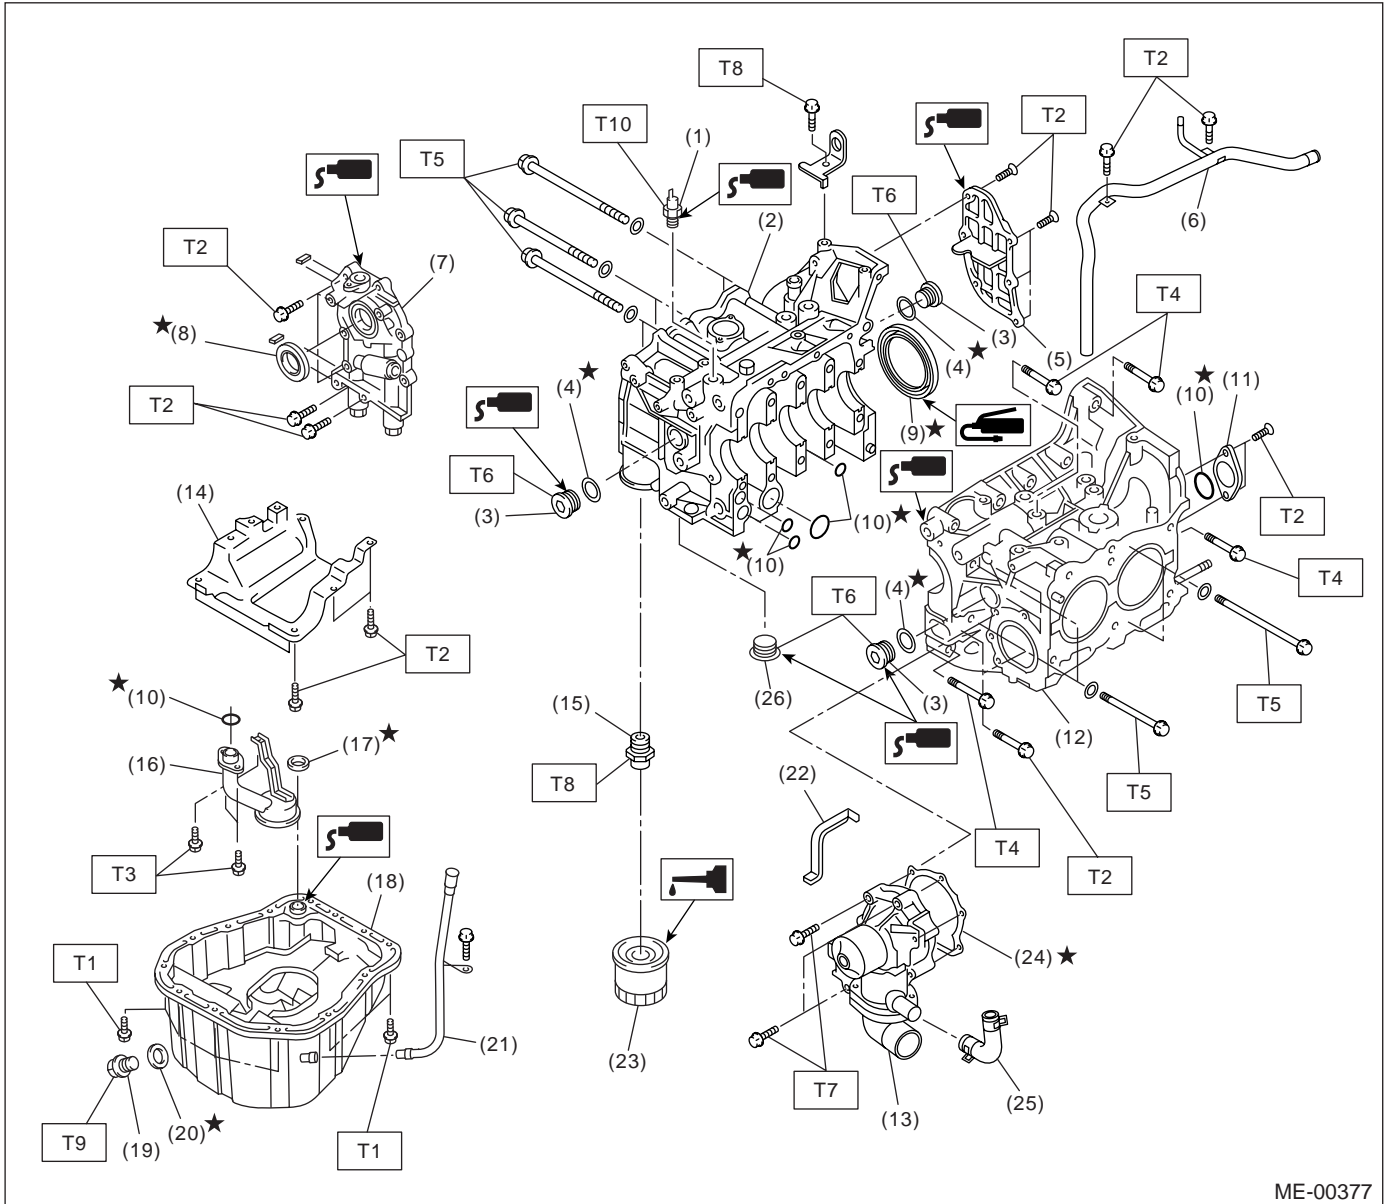
- (4) Valve spring seat
- (5) Intake valve oil seal
- (6) Valve spring

- (7) Retainer
- (8) Retainer key
- (9) Exhaust valve oil seal

GENERAL DESCRIPTION

MECHANICAL

5. CYLINDER BLOCK



ME-00377

- | | |
|--------------------------|----------------------------|
| (1) Oil pressure switch | (14) Baffle plate |
| (2) Cylinder block (RH) | (15) Oil filter connector |
| (3) Service hole plug | (16) Oil strainer |
| (4) Gasket | (17) Gasket |
| (5) Oil separator cover | (18) Oil pan |
| (6) Water by-pass pipe | (19) Drain plug |
| (7) Oil pump | (20) Metal gasket |
| (8) Front oil seal | (21) Oil level gauge guide |
| (9) Rear oil seal | (22) Water pump sealing |
| (10) O-ring | (23) Oil filter |
| (11) Service hole cover | (24) Gasket |
| (12) Cylinder block (LH) | (25) Water pump hose |
| (13) Water pump | (26) Plug |

Tightening torque: N-m (kgf-m, ft-lb)

- | |
|---|
| T1: 5 (0.5, 3.6) |
| T2: 6.4 (0.65, 4.7) |
| T3: 10 (1.0, 7) |
| T4: 25 (2.5, 18.1) |
| T5: <Ref. to ME(H4SO)-72, INSTALLATION, CYLINDER BLOCK.> |
| T6: 70 (7.1, 51) |
| T7: First 12 (1.2, 8.7)
Second 12 (1.2, 8.7) |
| T8: 45 (4.6, 33) |
| T9: 44 (4.5, 33) |
| T10: 25 (2.5, 18.1) |

ME(H4SO)-10

GENERAL DESCRIPTION

MECHANICAL

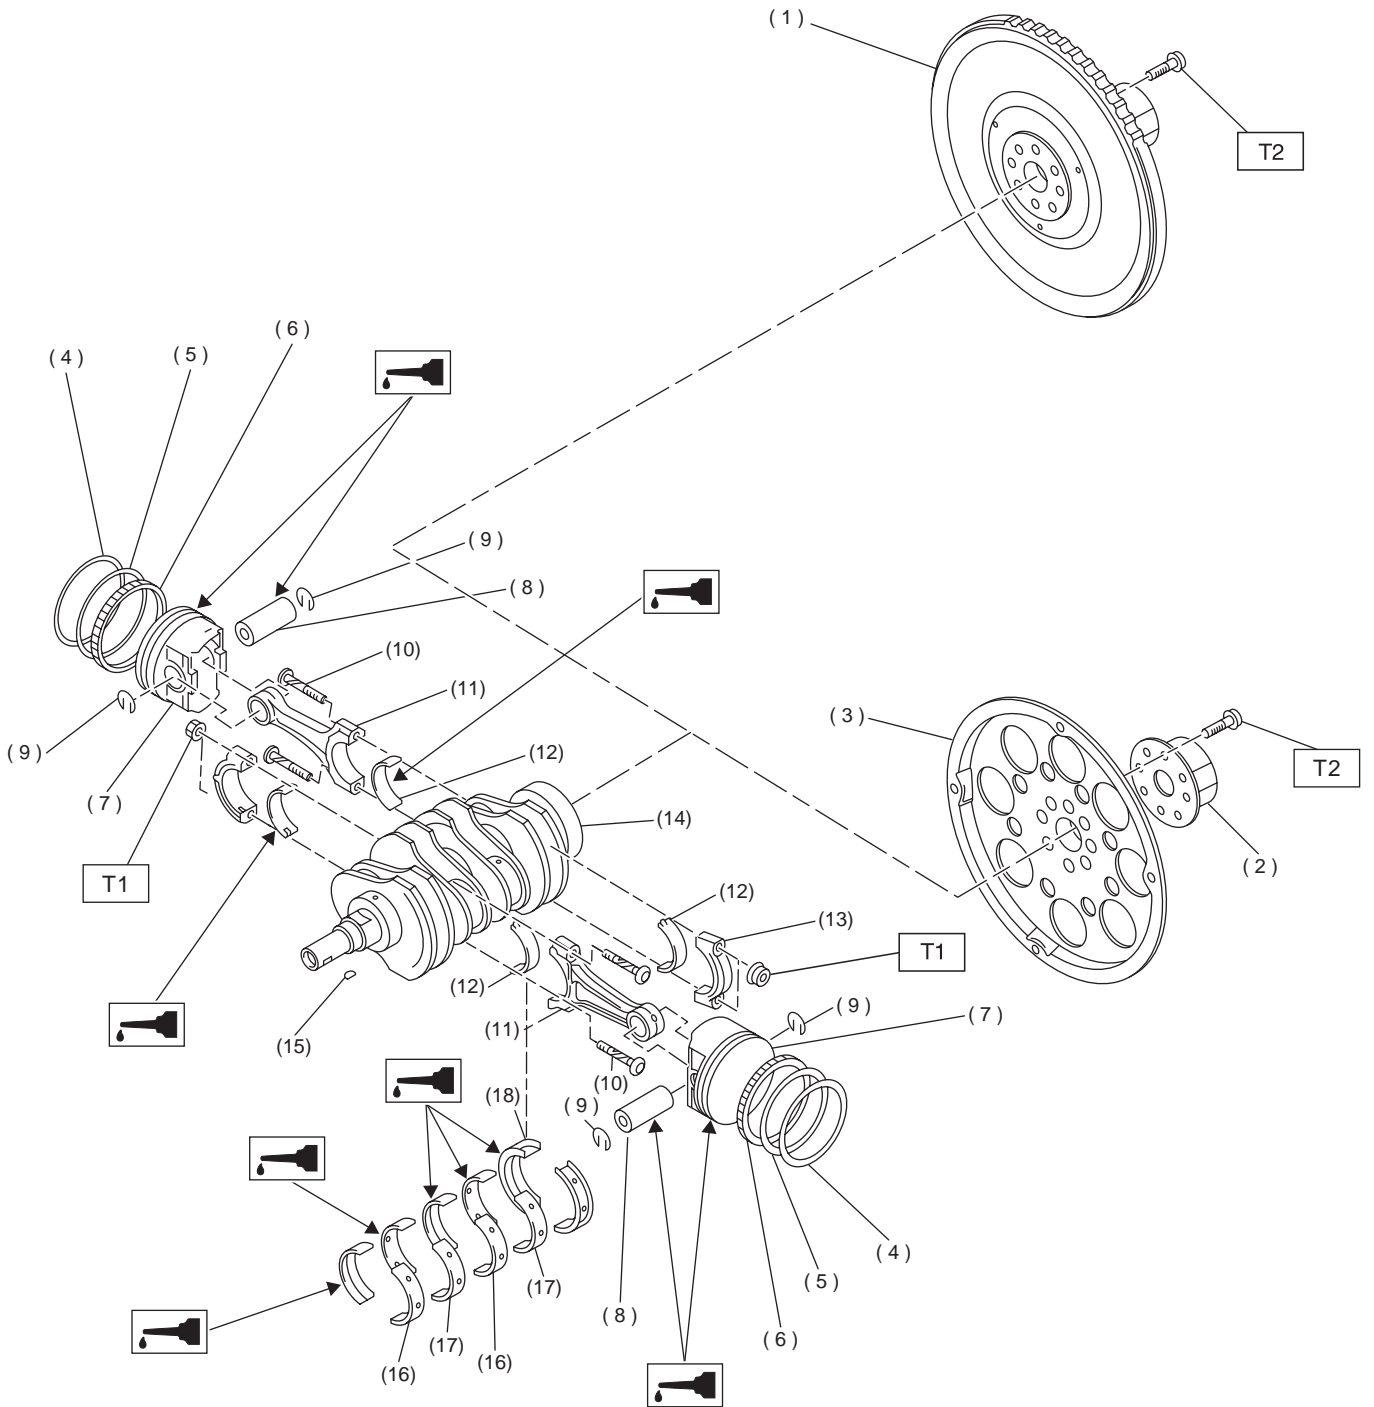
MEMO:

ME(H4SO)-11

GENERAL DESCRIPTION

MECHANICAL

6. CRANKSHAFT AND PISTON



ME-00190

GENERAL DESCRIPTION

MECHANICAL

-
- | | | |
|--------------------------------------|--------------------------------|--------------------------------|
| (1) Flywheel (MT vehicles only) | (9) Circlip | (17) Crankshaft bearing #2, #4 |
| (2) Reinforcement (AT vehicles only) | (10) Connecting rod bolt | (18) Crankshaft bearing #5 |
| (3) Drive plate (AT vehicles only) | (11) Connecting rod | |
| (4) Top ring | (12) Connecting rod bearing | |
| (5) Second ring | (13) Connecting rod cap | |
| (6) Oil ring | (14) Crankshaft | |
| (7) Piston | (15) Woodruff key | |
| (8) Piston pin | (16) Crankshaft bearing #1, #3 | |

Tightening torque: N·m (kgf-m, ft-lb)

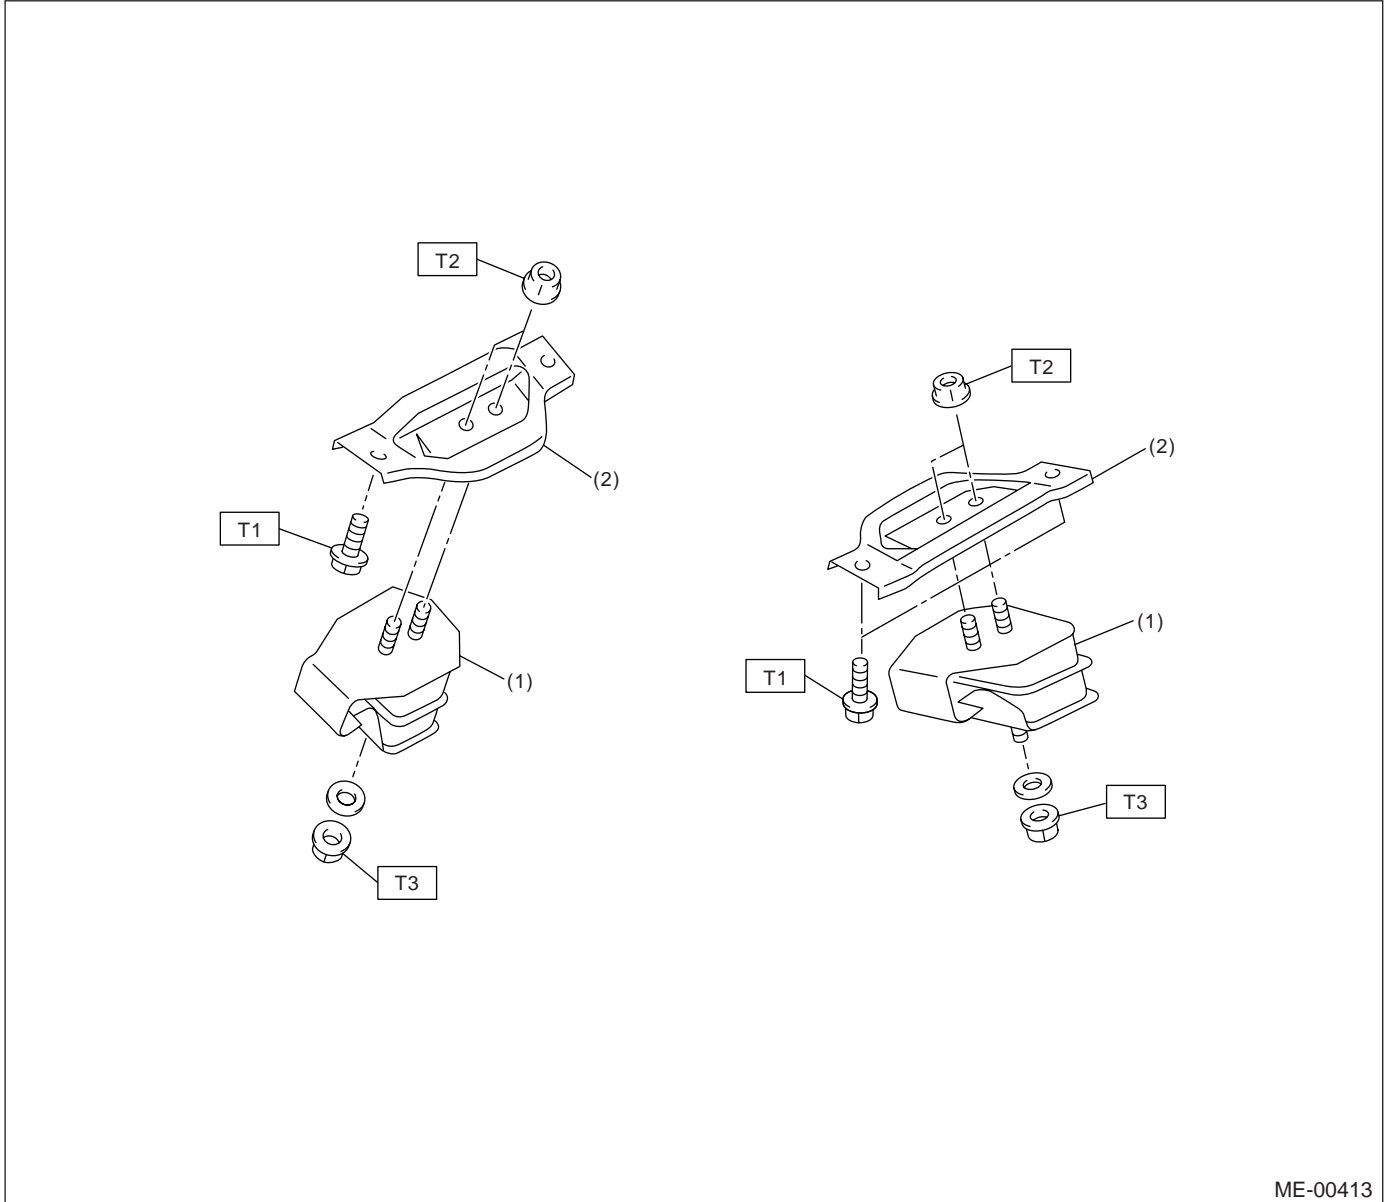
T1: 45 (4.6, 33)

T2: 72 (7.3, 52.8)

GENERAL DESCRIPTION

MECHANICAL

7. ENGINE MOUNTING



ME-00413

(1) Front cushion rubber

(3) Front engine mounting bracket

Tightening torque: N·m (kgf-m, ft-lb)

T1: 35 (3.6, 25.8)

T2: 42 (4.3, 31.0)

T3: 85 (8.7, 63)

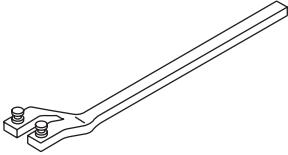
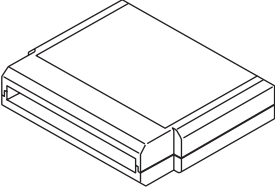
C: CAUTION

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part in the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.
- All parts should be thoroughly cleaned, paying special attention to the engine oil passages, pistons and bearings.

- Rotating parts and sliding parts such as piston, bearing and gear should be coated with oil prior to assembly.
- Be careful not to let oil, grease or coolant contact the timing belt, clutch disc and flywheel.
- All removed parts, if to be reused, should be re-installed in the original positions and directions.
- Bolts, nuts and washers should be replaced with new ones as required.
- Even if necessary inspections have been made in advance, proceed with assembly work while making rechecks.
- Remove or install engine in an area where chain hoists, lifting devices, etc. are available for ready use.
- Be sure not to damage coated surfaces of body panels with tools or stain seats and windows with coolant or oil. Place a cover over fenders, as required, for protection.
- Prior to starting work, prepare the following:
Service tools, clean cloth, containers to catch coolant and oil, wire ropes, chain hoist, transmission jacks, etc.
- Lift-up or lower the vehicle when necessary. Make sure to support the correct positions.


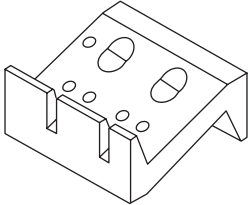
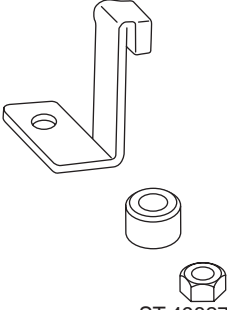
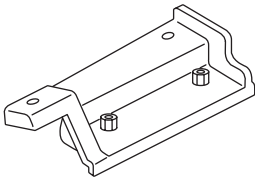
D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18231AA010	18231AA010	CAMSHAFT SPROCKET WRENCH	<ul style="list-style-type: none"> • Used for removing and installing camshaft sprocket. (LH side) • Also the CAMSHAFT SPROCKET WRENCH (499207100) can be used.
 ST24082AA210	24082AA210 (Newly adopted tool)	CARTRIDGE	Troubleshooting for electrical systems.





GENERAL DESCRIPTION

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p style="text-align: center;">ST22771AA030</p>	22771AA030	SELECT MONITOR KIT	Troubleshooting for electrical systems. <ul style="list-style-type: none"> • English: 22771AA030 (Without printer) • German: 22771AA070 (Without printer) • French: 22771AA080 (Without printer) • Spanish: 22771AA090 (Without printer)
 <p style="text-align: center;">ST-498267800</p>	498267800	CYLINDER HEAD TABLE	<ul style="list-style-type: none"> • Used for replacing valve guides. • Used for removing and installing valve springs.
 <p style="text-align: center;">ST-498277200</p>	498277200	STOPPER SET	Used for installing automatic transmission assembly to engine.
 <p style="text-align: center;">ST-498457000</p>	498457000	ENGINE STAND ADAPTER RH	Used with ENGINE STAND (499817000).






GENERAL DESCRIPTION

MECHANICAL

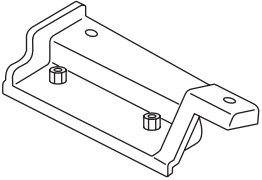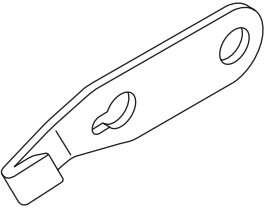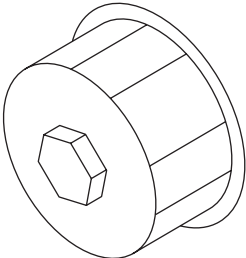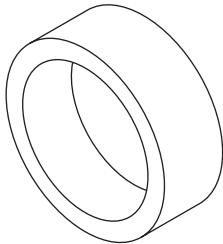ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p style="text-align: center;">ST-498457100</p>	498457100	ENGINE STAND ADAPTER LH	Used with ENGINE STAND (499817000).
 <p style="text-align: center;">ST-498497100</p>	498497100	CRANKSHAFT STOPPER	Used for stopping rotation of flywheel when loosening and tightening crankshaft pulley bolt, etc.
 <p style="text-align: center;">ST-498547000</p>	498547000	OIL FILTER WRENCH	Used for removing and installing oil filter.
 <p style="text-align: center;">ST-398744300</p>	398744300 (2000 cc model)	PISTON GUIDE	Used for installing piston in cylinder.






GENERAL DESCRIPTION

MECHANICAL

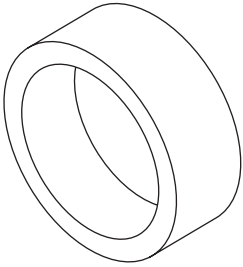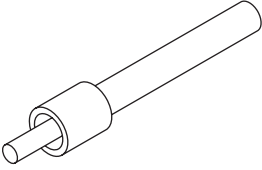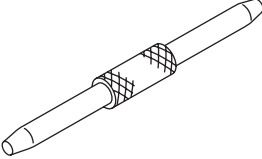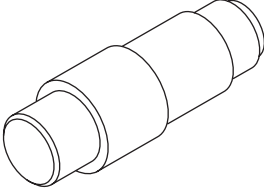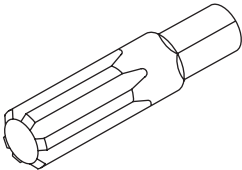ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p style="text-align: center;">ST-498747300</p>	<p style="text-align: center;">498747300 (2500 cc model)</p>	<p>PISTON GUIDE</p>	<p>Used for installing piston in cylinder.</p>
 <p style="text-align: center;">ST-498857100</p>	<p style="text-align: center;">498857100</p>	<p>VALVE OIL SEAL GUIDE</p>	<p>Used for press-fitting of intake and exhaust valve guide oil seals.</p>
 <p style="text-align: center;">ST-499017100</p>	<p style="text-align: center;">499017100</p>	<p>PISTON PIN GUIDE</p>	<p>Used for installing piston pin, piston and connecting rod.</p>
 <p style="text-align: center;">ST-499037100</p>	<p style="text-align: center;">499037100</p>	<p>CONNECTING ROD BUSHING REMOVER & INSTALLER</p>	<p>Used for removing and installing connecting rod bushing.</p>
 <p style="text-align: center;">ST-499057000</p>	<p style="text-align: center;">499057000</p>	<p>TORX PLUS</p>	<p>Used for removing flywheel (Dual mass flywheel).</p>






GENERAL DESCRIPTION

MECHANICAL

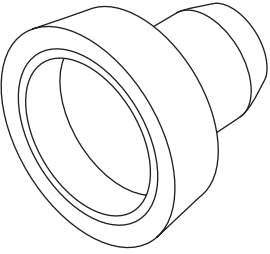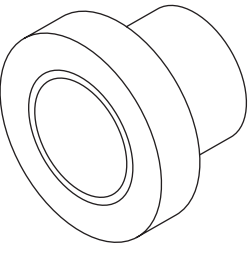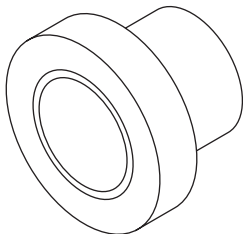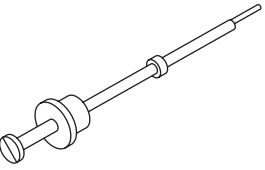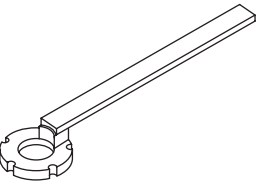ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p style="text-align: center;">ST-499587200</p>	499587200	CRANKSHAFT OIL SEAL INSTALLER	<ul style="list-style-type: none"> • Used for installing crankshaft oil seal. • Used with CRANKSHAFT OIL SEAL GUIDE (499597100).
 <p style="text-align: center;">ST-499587500</p>	499587500	OIL SEAL INSTALLER	Used for installing camshaft oil seal.
 <p style="text-align: center;">ST-499587700</p>	499587700	CAMSHAFT OIL SEAL INSTALLER	Used for installing cylinder head plug.
 <p style="text-align: center;">ST-499097700</p>	499097700	PISTON PIN REMOVER ASSY	Used for removing piston pin.
 <p style="text-align: center;">ST-499207400</p>	499207400	CAMSHAFT SPROCKET WRENCH	Used for removing and installing camshaft sprocket. (RH side)






GENERAL DESCRIPTION

MECHANICAL

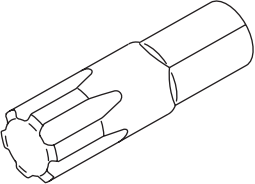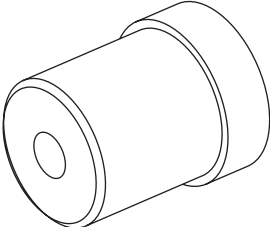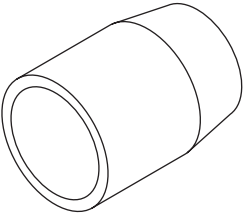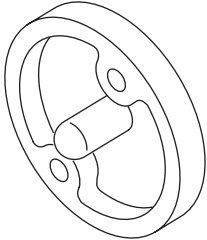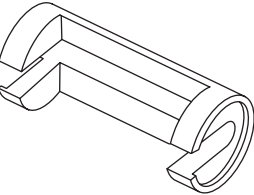ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p style="text-align: center;">ST-499497000</p>	499497000	TORX PLUS	Used for removing and installing camshaft cap.
 <p style="text-align: center;">ST-499587100</p>	499587100	OIL SEAL INSTALLER	Used for installing oil pump oil seal.
 <p style="text-align: center;">ST-499597000</p>	499597000	OIL SEAL GUIDE	<ul style="list-style-type: none"> • Used for installing camshaft oil seal. • Used with CAMSHAFT OIL SEAL INSTALLER (499587500).
 <p style="text-align: center;">ST-499597100</p>	499597100	CRANKSHAFT OIL SEAL GUIDE	<ul style="list-style-type: none"> • Used for installing crankshaft oil seal. • Used with CRANKSHAFT OIL SEAL INSTALLER (499587200).
 <p style="text-align: center;">ST-499718000</p>	499718000	VALVE SPRING REMOVER	Used for removing and installing valve spring.



GENERAL DESCRIPTION

MECHANICAL

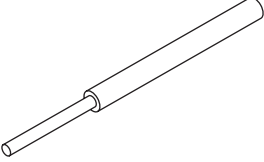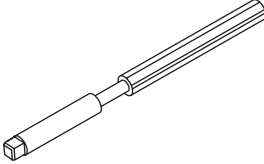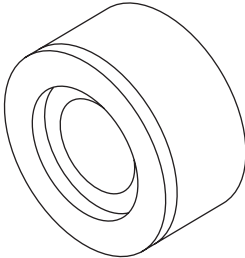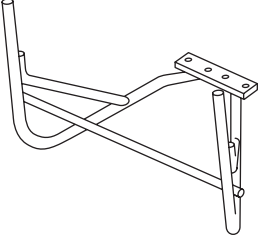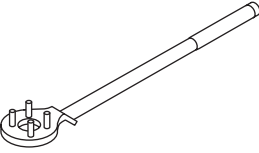ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p style="text-align: center;">ST-499767200</p>	499767200	VALVE GUIDE REMOVER	Used for removing valve guides.
 <p style="text-align: center;">ST-499767400</p>	499767400	VALVE GUIDE REAMER	Used for reaming valve guides.
 <p style="text-align: center;">ST-499767700</p>	499767700 (Intake side) 499767800 (Exhaust side)	VALVE GUIDE ADJUSTER	Used for installing valve guides.
 <p style="text-align: center;">ST-499817100</p>	499817100	ENGINE STAND	<ul style="list-style-type: none"> • Stand used for engine disassembly and assembly. • Used with ENGINE STAND ADAPTER RH (498457000) & LH (498457100).
 <p style="text-align: center;">ST-499977100</p>	499977100 (2500 cc model)	CRANK PULLEY WRENCH	Used for stopping rotation of crankshaft pulley when loosening and tightening crankshaft pulley bolts.

GENERAL DESCRIPTION

MECHANICAL

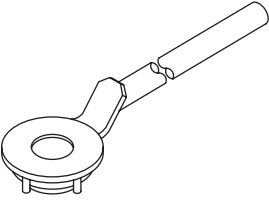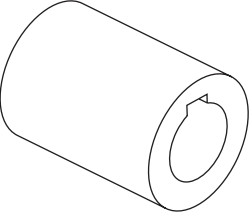ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499977400	499977400 (2000 cc model)	CRANK PULLEY WRENCH	Used for stopping rotation of crankshaft pulley when loosening and tightening crankshaft pulley bolts.
 ST-499987500	499987500	CRANKSHAFT SOCKET	Used for rotating crankshaft.

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Compression gauge	Used for measuring compression.
Tachometer (Secondary pick-up type)	Used for measuring idle speed.
Timing Light	Used for measuring ignition timing.

E: PROCEDURE

It is possible to conduct the following service procedures with engine on the vehicle, however, the procedures described in this section are based on the condition that the engine is removed from the vehicle.

- V-belt
- Timing Belt
- Valve Rocker Assembly
- Camshaft
- Cylinder Head

2. Compression

A: INSPECTION

CAUTION:

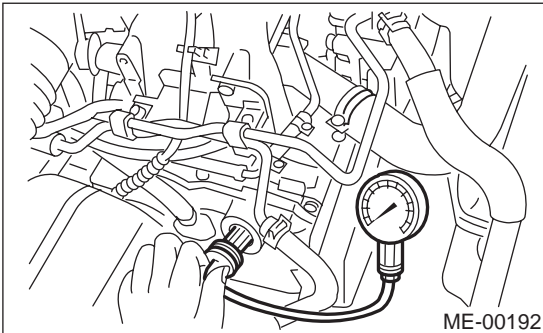
After warming-up, engine becomes very hot. Be careful not to burn yourself during measurement.

- 1) After warming-up the engine, turn the ignition switch to OFF.
- 2) Make sure that the battery is fully charged.
- 3) Lower the fuel pressure. <Ref. to FU(H4SO)-48, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
- 4) Remove all the spark plugs. <Ref. to IG(H4SO)-5, REMOVAL, Spark Plug.>
- 5) Fully open the throttle valve.
- 6) Check the starter motor for suitable performance and operation.
- 7) Hold the compression gauge tight against spark plug hole.

NOTE:

When using a screw-in type compression gauge, the screw (put into cylinder head spark plug hole) should be less than 18 mm (0.71 in) long.

- 8) Crank the engine by means of starter motor, and then read the maximum value on the gauge when the pointer is steady.



- 9) Perform at least two measurements per cylinder, and make sure that the values are correct.

Compression (350 rpm and fully open throttle):

Standard;

1,275 kPa (13.0 kg/cm², 185 psi)

Limit;

1,079 kPa (11.0 kg/cm², 156 psi)

Difference between cylinders;

49 kPa (0.5 kg/cm², 7 psi), or less

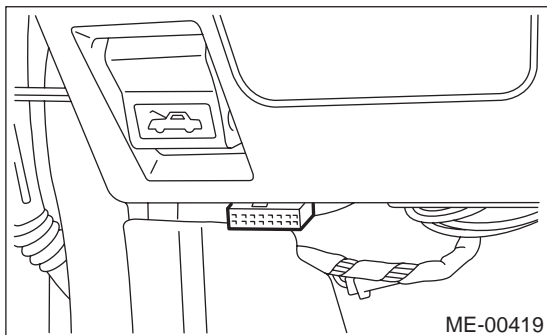
IDLE SPEED

MECHANICAL

3. Idle Speed

A: INSPECTION


- 1) Before checking idle speed, check the following:
 - (1) Ensure the air cleaner element is free from clogging, ignition timing is correct, spark plugs are in good condition, and the hoses are connected properly.
 - (2) Ensure that malfunction indicator light (CHECK ENGINE light) does not illuminate.
- 2) Warm-up the engine.
- 3) Stop the engine, and then turn the ignition switch to OFF.
- 4) When using the SUBARU SELECT MONITOR <Ref. to ME(H4SO)-15, SPECIAL TOOLS, PREPARATION TOOL, General Description.>
 - (1) Insert the cartridge to SUBARU SELECT MONITOR.
 - (2) Connect the SUBARU SELECT MONITOR to data link connector.



- (3) Turn the ignition switch to ON, and SUBARU SELECT MONITOR switch to ON.
- (4) Select the {2. Each System Check} in Main Menu.
- (5) Select the {Engine Control System} in Selection Menu.
- (6) Select the {1. Current Data Display & Save} in Engine Control System Diagnosis.
- (7) Select the {1.12 Data Display} in Data Display Menu.
- (8) Start the engine, and then read the engine idle speed.

- 5) When using the tachometer (Secondary pick-up type).

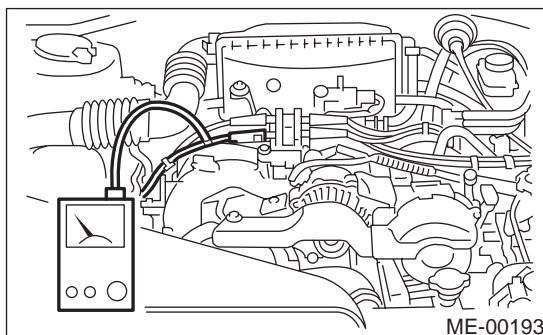- (1) Attach the pick-up clip to No. 1 cylinder spark plug cord.
- (2) Start the engine, and then read the engine idle speed.



NOTE:

- When using the OBD-II general scan tool, carefully read its operation manual.
 - This ignition system provides simultaneous ignition for #1 and #2 plugs. It must be noted that some tachometers may register twice that of actual engine speed.
- 6) Check the idle speed when unloaded. (With headlights, heater fan, rear defroster, radiator fan, air conditioning, etc. OFF)

Idle speed [No load and gears in neutral (MT vehicles), or N or P (AT vehicles) position]:
650±100 rpm

- 7) Check the idle speed when loaded. (Turn the air conditioning switch to "ON" and operate the compressor for at least 1 minute before measurement.)

Idle speed [A/C "ON", no load and gears in neutral (MT vehicles) or N or P (AT vehicles) position]:
850±100 rpm

NOTE:

Idle speed cannot be adjusted manually, because the idle speed is automatically adjusted. If the specified idle speed cannot be maintained, refer to General On-board Diagnosis Table under "Engine Control System". <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.>

4. Ignition Timing

A: INSPECTION

CAUTION:

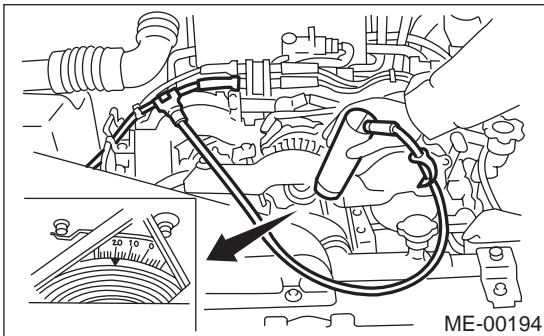
After warming-up, engine becomes very hot. Be careful not to burn yourself during measurement.

- 1) Warm-up the engine.
- 2) To check the ignition timing, connect a timing light to #1 cylinder spark plug cord, and illuminate the timing mark with timing light.
- 3) Start the engine at idle speed and check the ignition timing.

Ignition timing [BTDC/rpm]:

10°±10°/700 (MT vehicles)

15°±10°/700 (2.5 L AT vehicles)



If the timing is not correct, check the ignition control system.

Refer to Engine Control System. <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.>

INTAKE MANIFOLD VACUUM

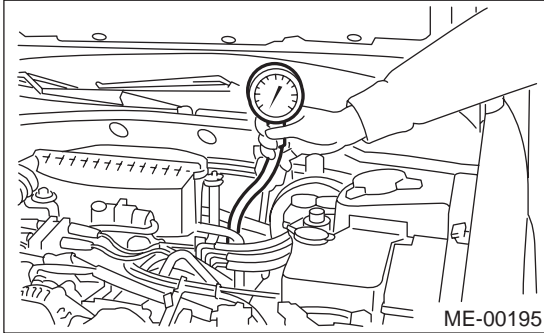
MECHANICAL

5. Intake Manifold Vacuum

A: INSPECTION

- 1) Warm-up the engine.
- 2) Disconnect the brake vacuum hose, and then install the vacuum gauge to hose fitting on manifold.
- 3) Keep the engine at idle speed, and then read the vacuum gauge indication.

By observing the gauge needle movement, the internal condition of engine can be diagnosed as described below.




Vacuum pressure (at idling, A/C "OFF"):
Less than -60.0 kPa (-450 mmHg, -17.72 inHg)

Diagnosis of engine condition by measurement of manifold vacuum	
Vacuum gauge indication	Possible engine condition
1. Needle is steady but lower than normal position. This tendency becomes more evident as engine temperature rises.	Leakage around intake manifold gasket or disconnection or damaged vacuum hose
2. When engine speed is reduced slowly from higher speed, needle stops temporarily when it is lowering or becomes steady above normal position.	Back pressure too high, or exhaust system clogged
3. Needle intermittently drops to position lower than normal position.	Leakage around cylinder
4. Needle drops suddenly and intermittently from normal position.	Sticky valves
5. When engine speed is gradually increased, needle begins to vibrate rapidly at certain speed, and then vibration increases as engine speed increases.	Weak or broken valve springs
6. Needle vibrates above and below normal position in narrow range.	Defective ignition system.

6. Engine Oil Pressure

A: INSPECTION

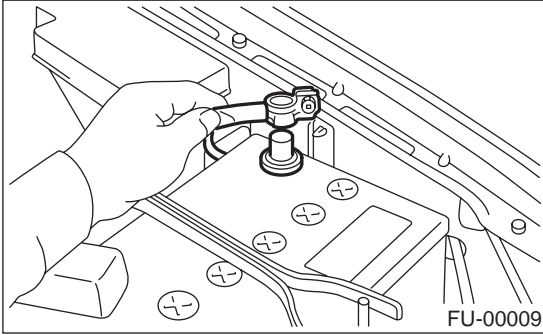1) Disconnect the ground cable from battery.




2) Remove the generator from bracket. <Ref. to SC(H4SO)-14, REMOVAL, Generator.>

3) Disconnect the connector from oil pressure switch.


4) Remove the oil pressure switch from engine cylinder block. <Ref. to LU(H4SO)-17, REMOVAL, Oil Pressure Switch.>

5) Connect the oil pressure gauge hose to cylinder block.

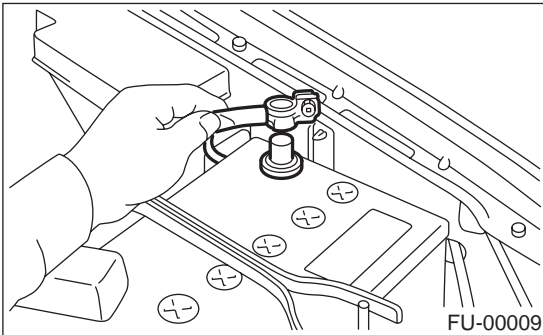6) Connect the battery ground cable to battery.



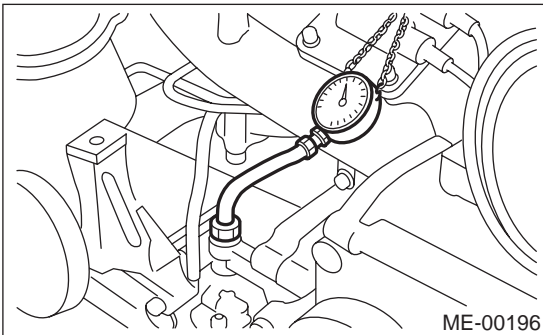7) Start the engine, and then measure the oil pressure.



Oil pressure:

88 kPa (0.9 kg/cm², 13 psi) or more at 800 rpm

294 kPa (3.0 kg/cm², 43 psi) or more at 5,000 rpm

CAUTION:

- If the oil pressure is out of specification, check the oil pump, oil filter and lubrication line. <Ref. to LU(H4SO)-19, INSPECTION, Engine Lubrication System Trouble in General.>
- If the oil pressure warning light is turned ON and oil pressure is in specification, replace the oil pressure switch. <Ref. to LU(H4SO)-19, Inspection, Engine Lubrication System Trouble in General.>

NOTE:

The specified data is based on an engine oil temperature of 80°C (176°F).

8) After measuring the oil pressure, install the oil pressure switch. <Ref. to LU(H4SO)-17, Installation, Oil Pressure Switch.>

Tightening torque:

25 N·m (2.5 kgf·m, 18.1 ft·lb)

9) Install the generator and V-belt in the reverse order of removal, and then adjust the V-belt deflection. <Ref. to ME(H4SO)-42, INSTALLATION, V-belt.>

FUEL PRESSURE

MECHANICAL

7. Fuel Pressure

A: INSPECTION

WARNING:

Before removing the fuel pressure gauge, lower the fuel pressure.

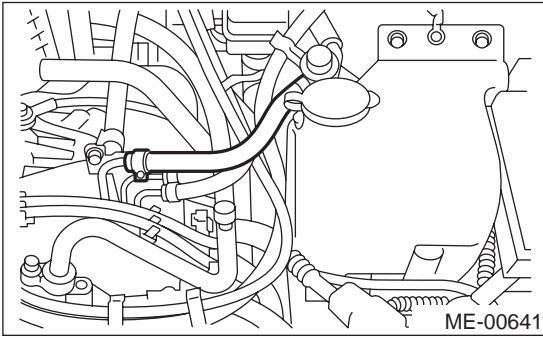
NOTE:

If out of specification, check or replace the pressure regulator and pressure regulator vacuum hose.


1) Lower the fuel pressure. <Ref. to FU(H4SO)-48, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>

2) Open the fuel flap lid, and then remove the fuel filler cap.

3) Disconnect the fuel delivery hoses from fuel damper, and then connect the fuel pressure gauge.



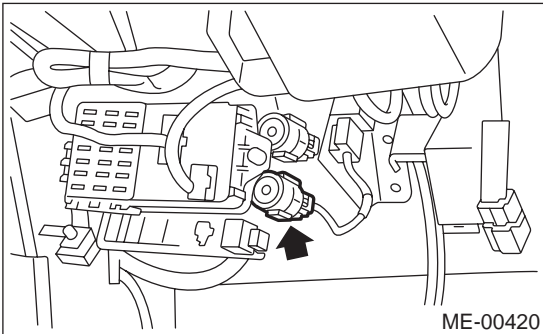4) Connect the connector of fuel pump relay.




5) Start the engine.

6) Measure the fuel pressure while disconnecting the pressure regulator vacuum hose from intake manifold.

Fuel pressure:

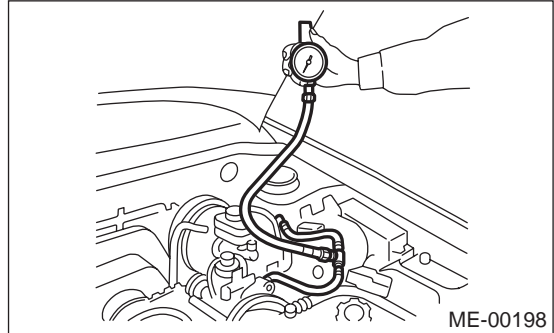
Standard; 284 — 314 kPa (2.9 — 3.2 kg/cm², 41 — 46 psi)



7) After connecting the pressure regulator vacuum hose, measure the fuel pressure.

Fuel pressure:

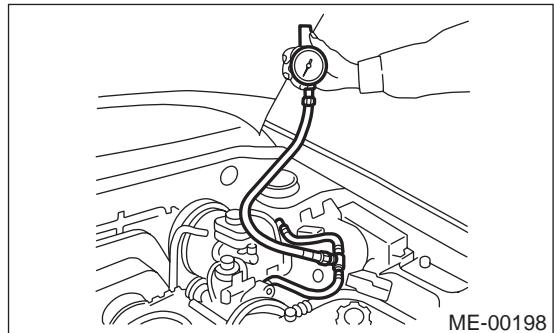Standard; 206 — 235 kPa (2.1 — 2.4 kg/cm², 30 — 34 psi)



NOTE:

The fuel pressure gauge registers 10 to 20 kPa (0.1 to 0.2 kg/cm², 1 to 3 psi) higher than standard values during high-altitude operations.

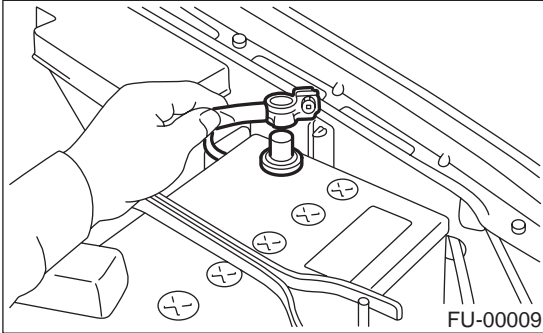
8. Valve Clearance

A: INSPECTION


NOTE:

Inspection and adjustment of the valve clearance should be performed while engine is cold.

- 1) Set the vehicle on a lift.
- 2) Lift-up the vehicle.
- 3) Remove the under cover.
- 4) Lower the vehicle.
- 5) Disconnect the ground cable from battery.



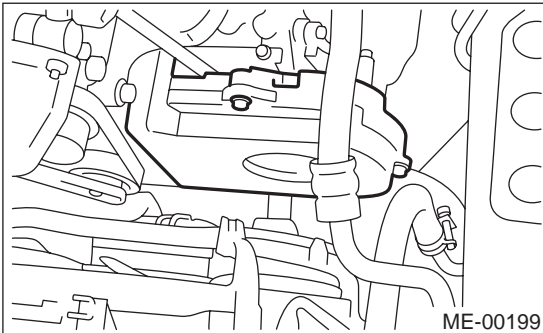- 6) Remove the belt cover (LH).




- 7) When inspecting the #1 and #3 cylinders;
 - (1) Disconnect the spark plug cords from spark plugs (RH side).
 - (2) Disconnect the PCV hose from rocker cover (RH).
 - (3) Remove the bolts, and then remove the rocker cover (RH).
- 8) When inspecting the #2 and #4 cylinders;
 - (1) Disconnect the spark plug cords from spark plugs (LH Side).
 - (2) Disconnect the PCV hose from rocker cover (LH).
 - (3) Remove the bolts, and then remove the rocker cover (LH).

- 9) Set the #1 cylinder piston to top dead center of compression stroke by rotating crankshaft pulley clockwise using a socket wrench.

NOTE:

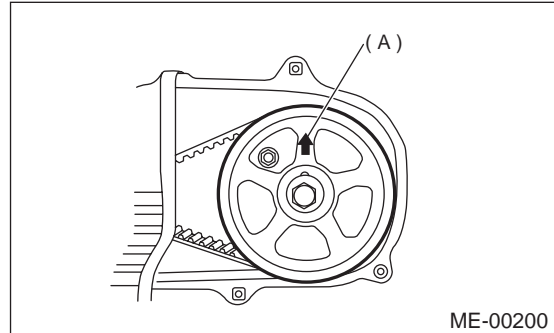When arrow mark (A) on the camshaft sprocket (LH) comes exactly to the top, #1 cylinder piston is brought to the top dead center of compression stroke.



- 10) Measure the #1 cylinder valve clearance by using thickness gauge.

CAUTION:

- Insert the thickness gauge (A) in as horizontal a direction as possible with respect to the valve stem end face.
- Measure the exhaust valve clearances while lifting-up the vehicle.

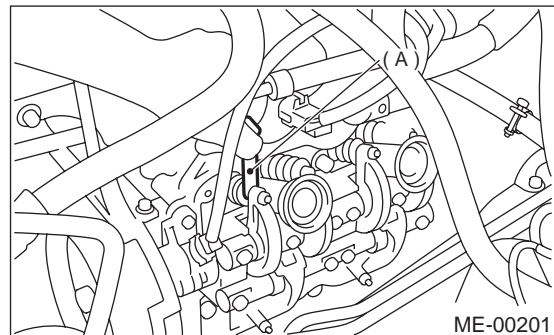
Valve clearance:

Intake;

$0.20 \pm 0.02 \text{ mm } (0.0079 \pm 0.0008 \text{ in})$

Exhaust;

$0.25 \pm 0.02 \text{ mm } (0.0098 \pm 0.0008 \text{ in})$



- 11) If necessary, adjust the valve clearance. <Ref. to ME(H4SO)-30, ADJUSTMENT, Valve Clearance.>

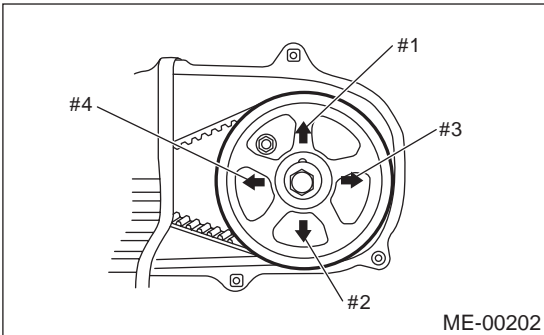
VALVE CLEARANCE

MECHANICAL

12) Similar to measurement procedures used for #1 cylinder, measure the #2, #3 and #4 cylinder valve clearances.

NOTE:

- Be sure to set the cylinder pistons to their respective top dead centers on compression stroke before measuring valve clearances.
- To set the #3, #2 and #4 cylinder pistons to their top dead centers on compression stroke, turn the crankshaft pulley clockwise 90° at a time starting with arrow mark on camshaft sprocket (LH) facing up.




13) After inspection, install the related parts in the reverse order of removal.

Resonator chamber;

Air cleaner case;

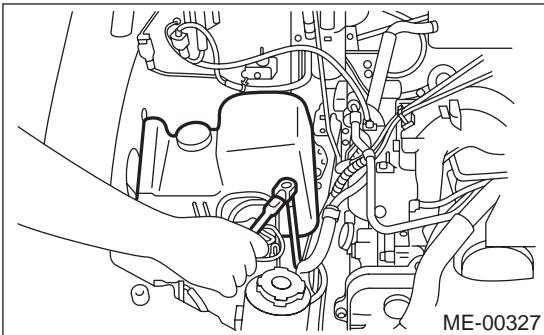33 N·m (3.4 kgf-m, 25 ft-lb)



B: ADJUSTMENT

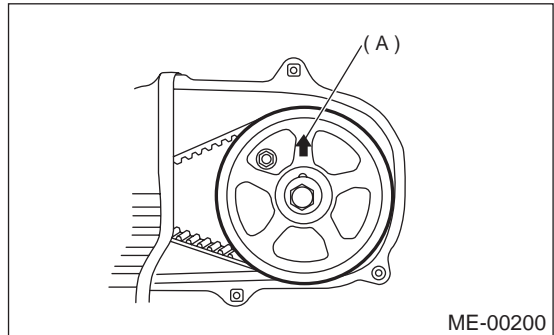
NOTE:

Adjustment of the valve clearance should be performed while engine is cold.

1) Set the #1 cylinder piston to top dead center of compression stroke by rotating crankshaft pulley clockwise using socket wrench.

NOTE:

When arrow mark (A) on the camshaft sprocket (LH) comes exactly to the top, #1 cylinder piston is brought to the top dead center of compression stroke.



2) Adjust the #1 cylinder valve clearance.

- (1) Loosen the valve rocker nut and screw.
- (2) Place suitable thickness gauge.
- (3) While noting the valve clearance, tighten the valve rocker adjuster screw.
- (4) When specified valve clearance is obtained, tighten the valve rocker nut.

Tightening torque:

10 N·m (1.0 kgf-m, 7.2 ft-lb)

CAUTION:

- Insert the thickness gauge in as horizontal a direction as possible with respect to the valve stem end face.
- Adjust the exhaust valve clearances while lifting up the vehicle.

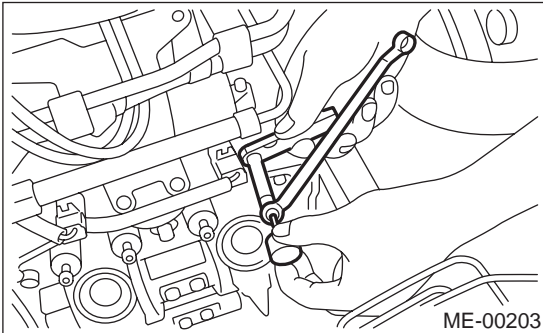
Valve clearance:

Intake;

0.20 ± 0.02 mm (0.0079 ± 0.0008 in)

Exhaust;

0.25 ± 0.02 mm (0.0098 ± 0.0008 in)



- 3) Ensure the valve clearances are within specifications.
- 4) Turn the crankshaft two complete rotations until #1 cylinder piston is again set to the top dead center on compression stroke.
- 5) Ensure the valve clearances are within specifications. If necessary, readjust the valve clearances.
- 6) Similar to adjustment procedures used for #1 cylinder, adjust the #2, #3 and #4 cylinder valve clearances.

NOTE:

- Be sure to set the cylinder pistons to their respective top dead centers on compression stroke before adjusting valve clearances.
- To set the #3, #2 and #4 cylinder pistons to their top dead centers on compression stroke, turn the crankshaft pulley clockwise 90° at a time starting with arrow mark on camshaft sprocket (LH) facing up.

